

Assembly instruction for 144680



Assemble the wheels on the bottom frame



Layout all parts




Mount the push bar on the bottom frame




And attach with nuts on the inside



Fit top shelf vertically

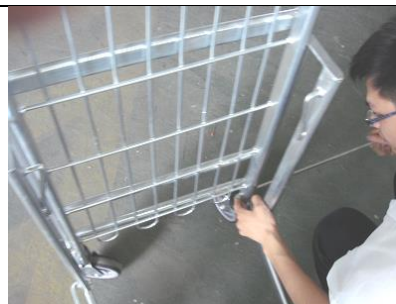

Put in the axel and attach the end caps again

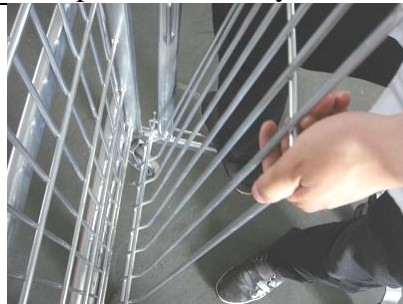

Then fit the bottom shelf



Finished trolley